




CH

STGCH6-SD
STGCH9-SD
STGCH12-SD

- Deck forced heating
- Single glazed
- Sliding rear doors (CH6 Hinged)
- Sliding front doors or solid front
- Three adjustable shelves – flat or angled
- Ticket strips on shelves and base
- Under shelf and canopy LED lights
- Solid front glass that hinges at base – optional

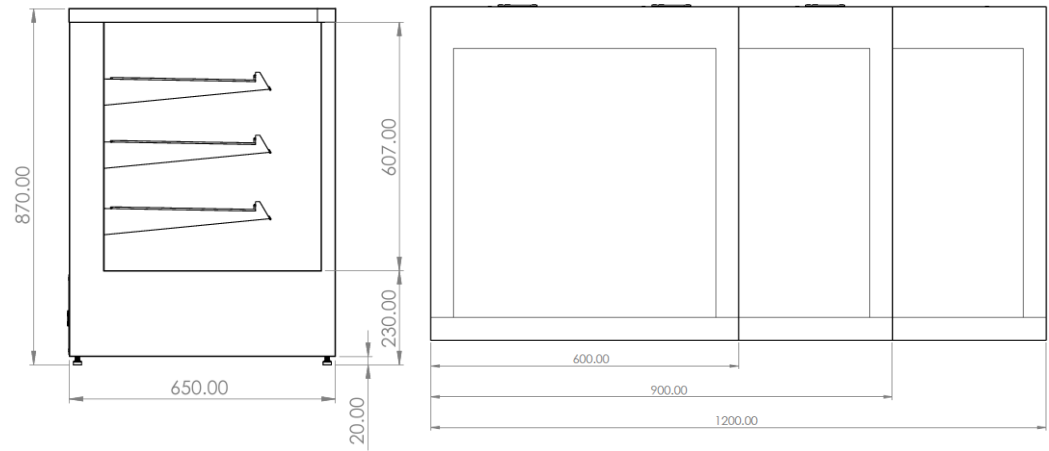

MODEL	CABINET				SHELVING	OPERATING TEMP	SHELF	BASE TRAY	TOTAL FOOD	DISPLAY	FREQUENCY	POWER	CONNECTION POWER CORD 2200MM		VOLTAGE	PACKED FOR SHIPPING				
	LENGTH (MM)	DEPTH (MM)	HEIGHT (MM)	WEIGHT KG		DEG C	W X D	W X D	100MM UNITS	M²	Hz	KW 230V	AMP	NZ/AUS	UK	V	LENGTH (MM)	DEPTH (MM)	HEIGHT (MM)	WEIGHT KG
STGCH6 STGCH6-SD	600	650	870	90	3 + BASE	75-85	490 X 350	560 X 420	74	1.18	50	1.3	5.4	10 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240	700	730	1040	97
STGCH9 STGCH9-SD	900	650	870	112	3 + BASE	75-85	790 X 350	860 X 420	119	1.71	50	1.8	7.4	10 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240	1000	730	1040	119
STGCH12 STGCH12-SD	1200	650	870	128	3 + BASE	75-85	1090 X 350	1160 X 420	163	2.19	50	2.3	9.6	15 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240	1300	730	1040	135


UNPACK AND LIFT

The STGCH cabinet can weigh between 90-130kg. It is recommended using 2-4 people to safely lift the cabinet into position.



BENCHTOP OPTIONS


The STGCH cabinet is a pure plug and play cabinet. There is no need to modify your bench for refrigeration requirements. The only requirement is that the rear is unobstructed.

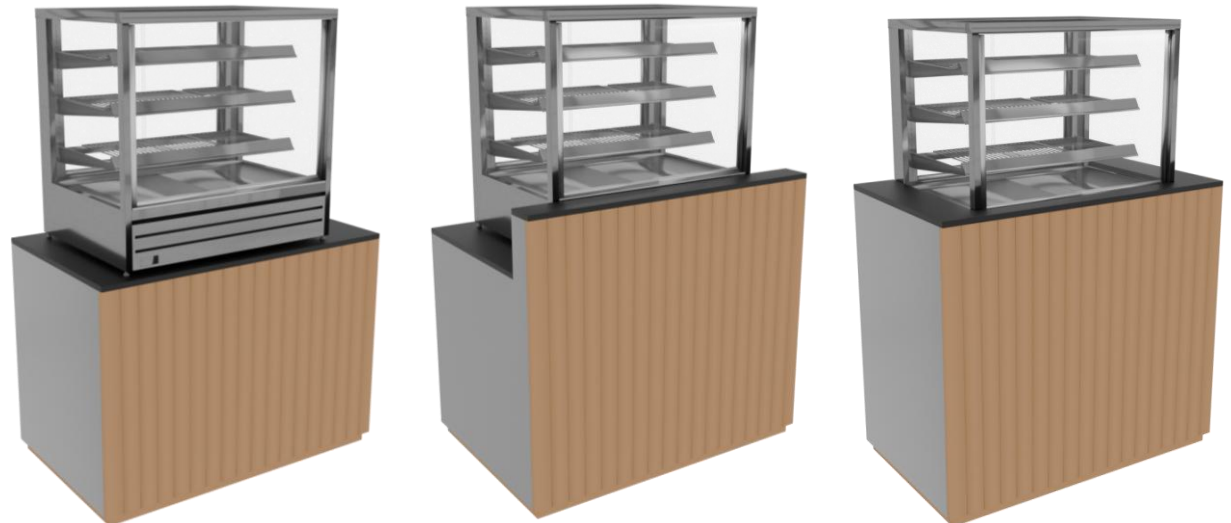



REMOVE


- To reduce weight, remove
- All doors
 - Shelving
 - Wire racks
 - Base plates

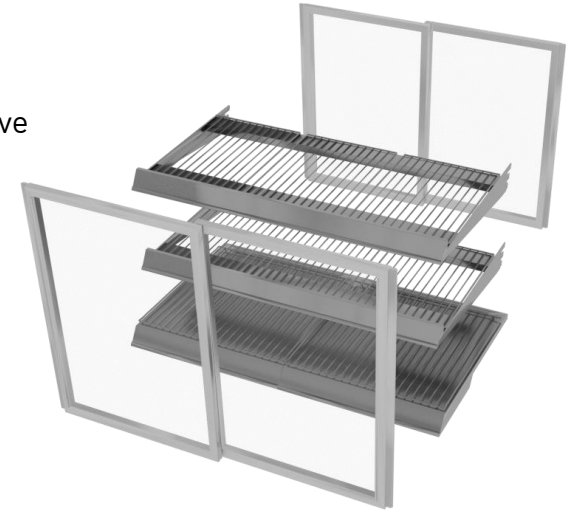

PLAN AHEAD


- Have plenty of labour on hand
- Use a mechanical lifting device – optional
- Check benchtop space required measurement
- Ensure adequate cabinet structure to handle weight
- Protect benchtop with a mat or similar
- Pre-adjust unit feet if needed

All accepted local safety work wear and standards should be adhered to with a safety programme developed before undertaking this kind of lifting work.

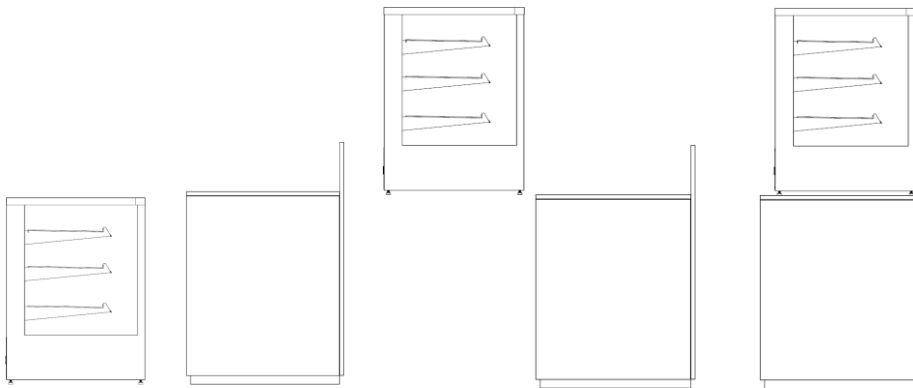



STG CH PLACED INTO BENCH DETAIL

coSSiga

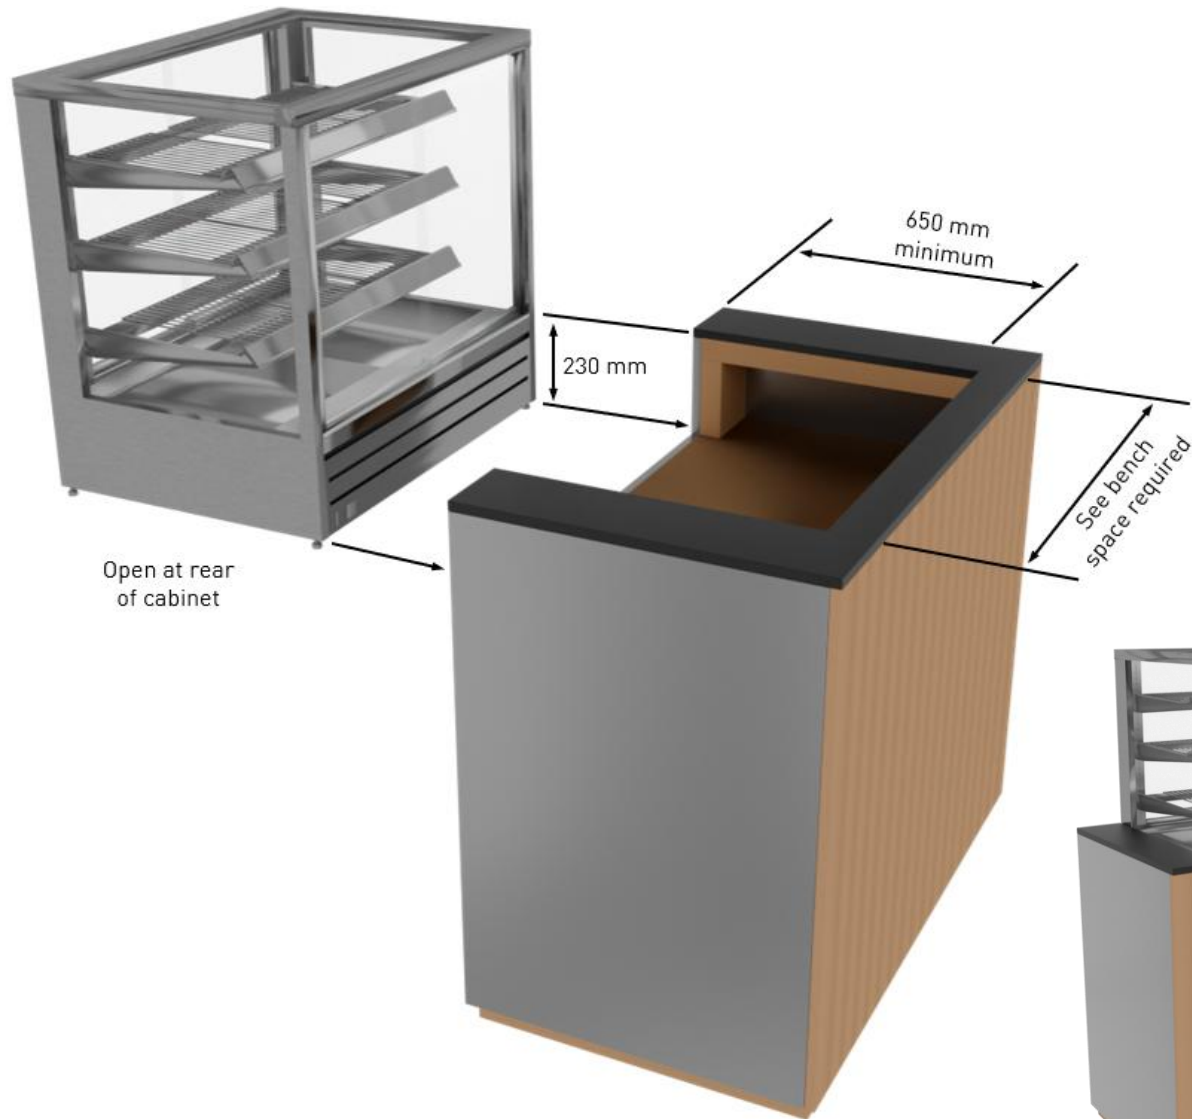


BENCHTOP SPACE REQUIRED

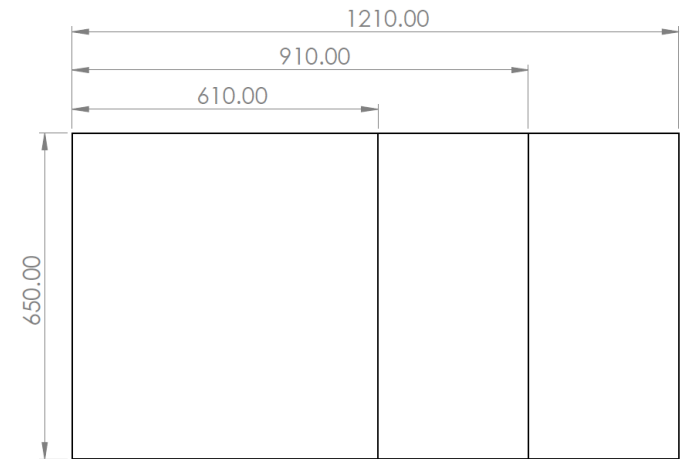

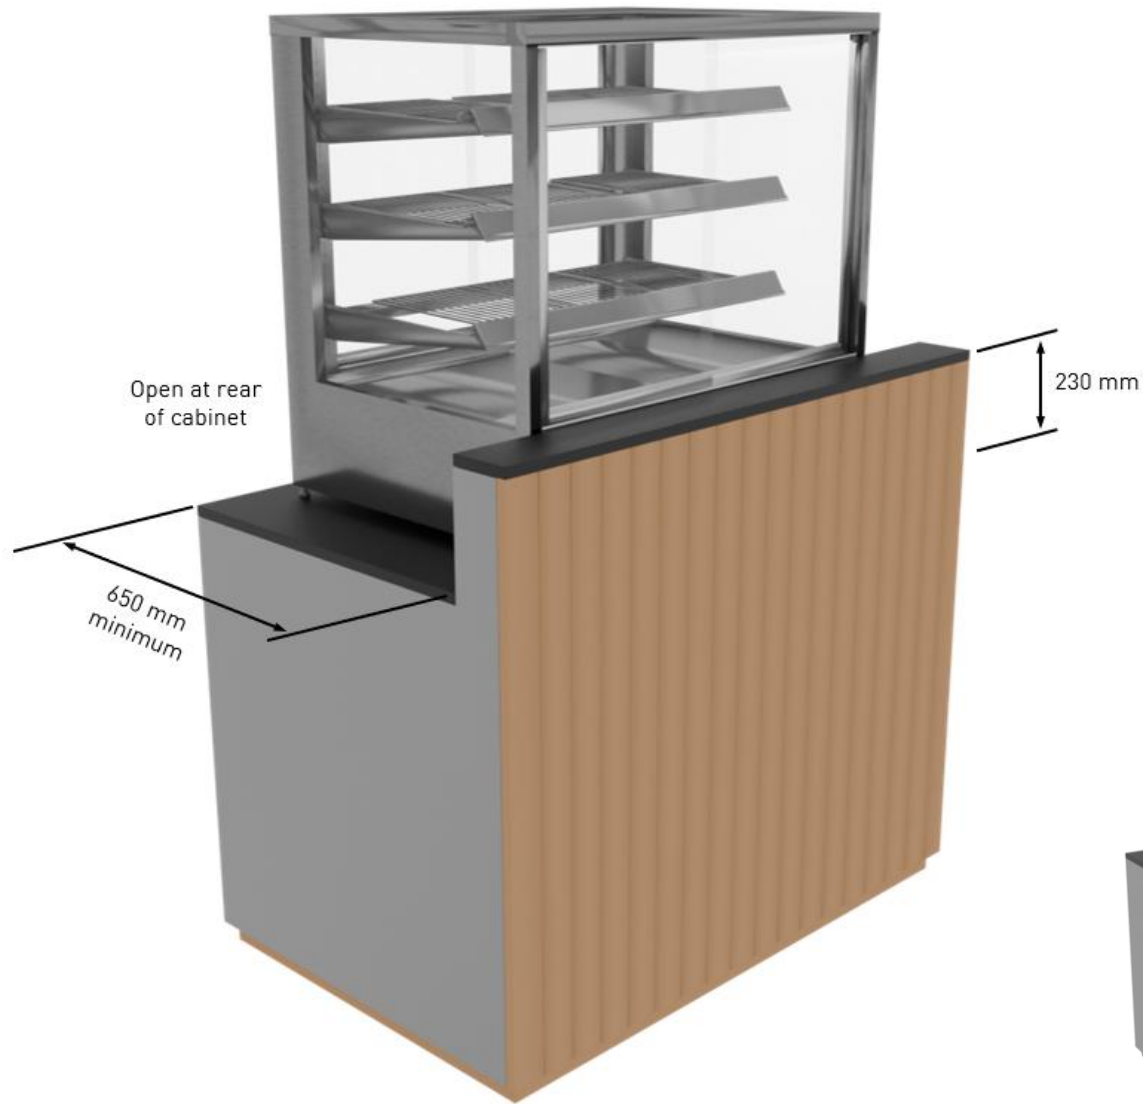


BENCHTOP SPACE REQUIRED

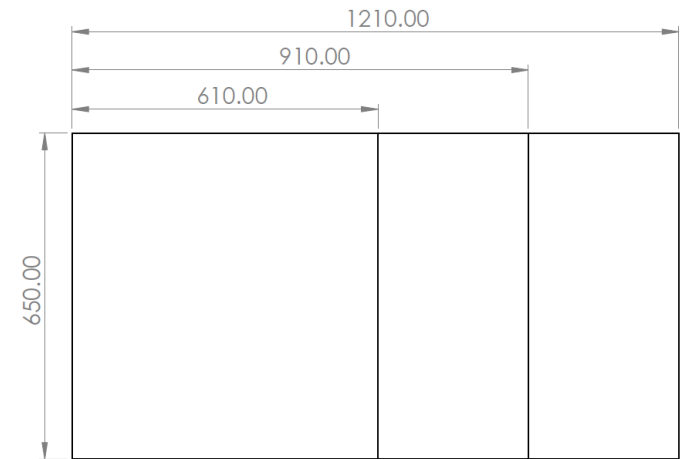

AGAINST A WALL

If the STGCH is going up against a rear wall, the controller should be moved to the front. A small gap (20 mm) should be allowed for at the rear so that the small electronic cooling fans can draw airflow.

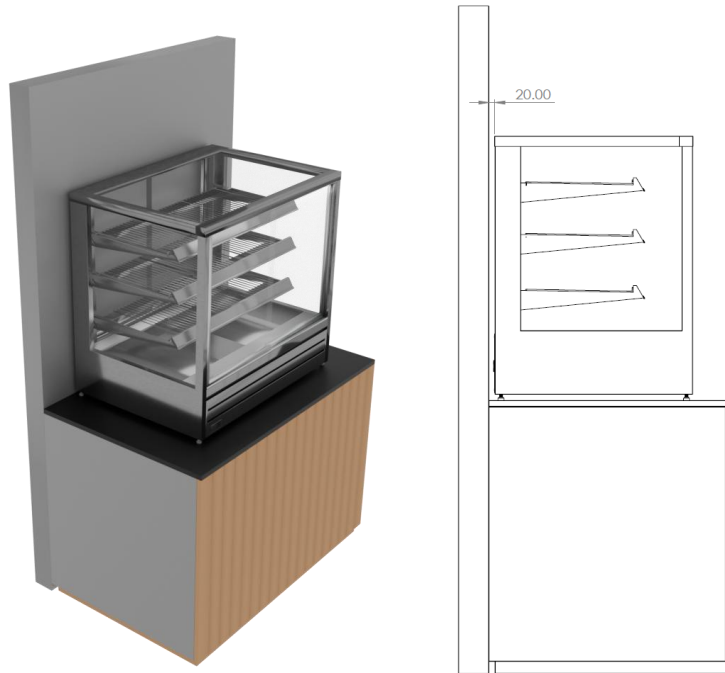

CONTROLLER MOVEMENT

The STGCH comes standard with the controller facing the rear. If there is no access to the rear, the controller can be moved to the front of the cabinet.

For detailed instructions on how to move the controller to the front, scan the QR code or visit Cossiga.com



REAR FACING



FRONT FACING

TILTING FRONT GLASS

STGCH units which have a solid front glass have the ability to tilt the front glass forward to allow for easy cleaning and ticket strip merchandising.

TO TILT THE FRONT GLASS:

- Pull the top trim out, away from the cabinet before flipping it up
- Finger slots will be visible on top of the front glass
- Using the finger slots, pull the top of the glass out from the cabinet



ALWAYS HOLD THE GLASS WHEN OPENING



HOLD THE GLASS



ALWAYS HOLD THE GLASS WHEN OPENING




WHEN OPENING THE SOLID FRONT, ENSURE YOU USE ONE HAND TO SUPPORT THE GLASS AS YOU CLEAN OR ACCESS THE TICKET STRIPS



LED LIGHTBOX

- Easy-to-attach Lightbox bracket
- Glass front Lightbox with LED white back lit panel
- Custom PVC graphic slides into Lightbox

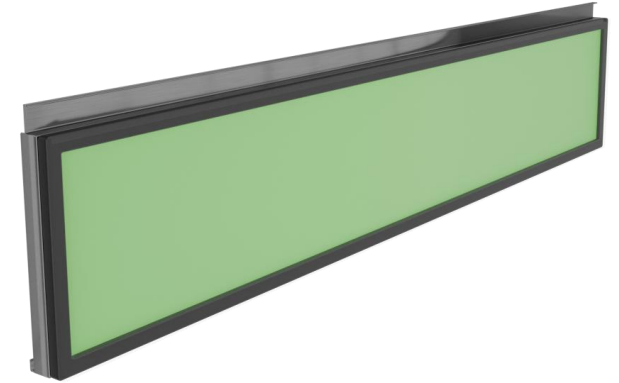

GASTRONORM PAN KIT

Expand the use of your heated cabinet with this Gastronorm Pan Kit with an angled frame that accepts ½ Gastro pan 65mm deep (supplied)


Holds fried foods and bulky products like chicken, lasagne, toppers, roast potatoes, etc.

Remove bottom shelf for optimum viewing.

STGCH6 – 2 Pans
STGCH9 – 3 Pans
STGCH12 – 3 Pans



BAG HOLDER

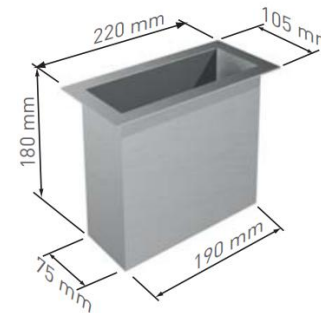

TONG HOLDER









LED LIGHTBOX INSTALL

1. Lift front grill upwards
2. Hinge bottom of front grill outwards
3. Remove the grill by lowering it as you pull it outwards from the cabinet
4. Plug the cable on the back of the Lightbox into the plug found in the bottom left of the front cavity
5. Lift the top of the Lightbox bracket into the top of the cavity
6. Hinge the bottom of the Lightbox inwards and lower the Lightbox into position




The Lightbox is controlled by the cabinet LED lights switch on the controller. When the cabinet LEDs are turned on, the Lightbox is turned on.

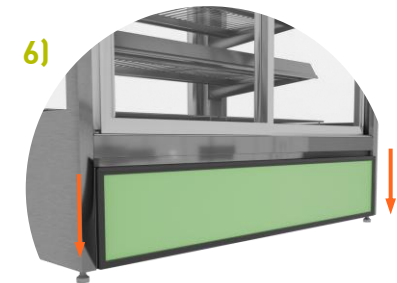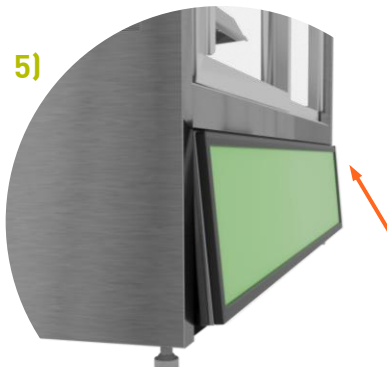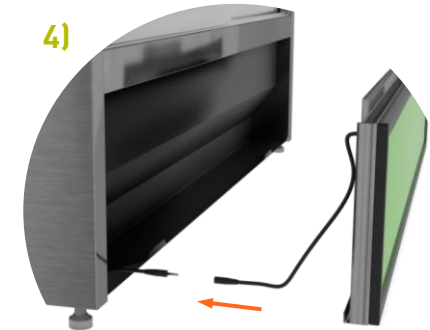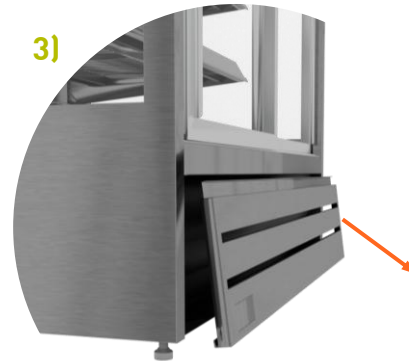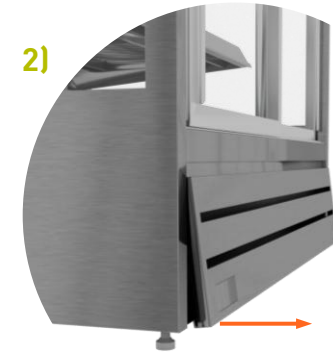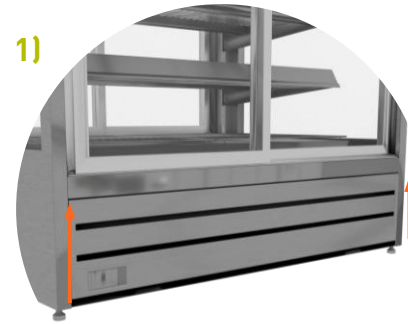


GLASS FLAT OR ANGLED

The shelves can be lifted and pulled out until they lock into their second or third slots, resulting in angled shelves.

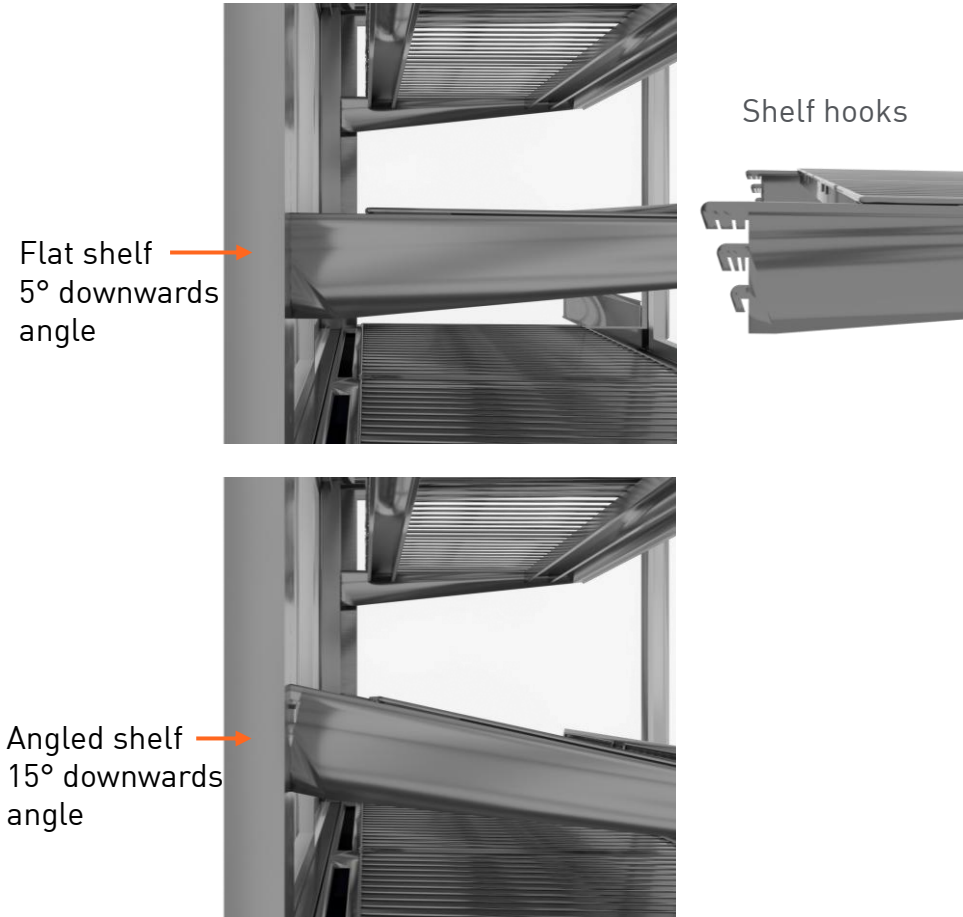

TICKET STRIP

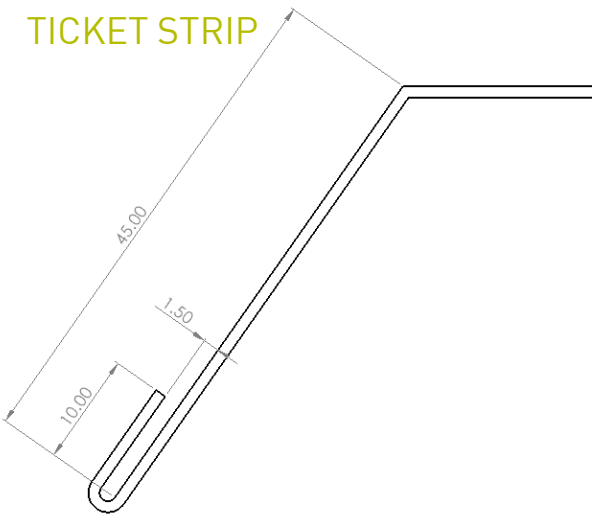

TICKET STRIP LENGTHS

CABINET LENGTH MM	TICKET STRIP LENGTH MM
600	490
900	790
1200	1090